

FILTER REPLACEMENT

Empty the water out of the tank (6).

Remove the used filter (12) and pulling upwards and out of the tank.

Dispose of the used filter (12) in the bin for non-recyclable waste.

Remove the new filter from its bag (12).

Dip the new filter (12) in the fresh water and stir to remove any air bubbles. Do not use the rinsing water to make coffee.

Insert the filter (12) in the housing at the bottom of the water tank (6), press vertically on the top of the filter to connect as required.

The filter (12) must fit in its housing.

Fill the tank with fresh water (6).

Place a large cup on the cup holder insert (10) and rinse the machine: press the large coffee button (4) after inserting the plastic rinsing pod in the machine (supplied with the machine).

Dispose of the rinsing water: your machine is ready for use.

To reset the filter replacement warning (central blue light (2) flashes slowly), press briefly (less than 5 seconds) and simultaneously on the two coffee option buttons (3 and 4): the light will go on.


Key information:

- Store new filters in their original sealed packaging, in a cool dry location away from direct sunlight
- Only filter cold water
- Clean the tank on a regular basis (6).
- Periodically replace the filter (12), every 250 coffees (when the central blue light (2) lights up).
- Never re-use a used filter (12) dispose of the filter immediately after the 250 coffees.

Where can you find a tank filter no. 12?

This filter can be ordered via the Rombouts on-line shop (www.rombouts.com/uk).

DESCRIPTION DE LA MACHINE
DESCRIPTION OF THE MACHINE
BESCHRIJVING VAN HET APPARAAT
BESCHREIBUNG DER MASCHINE
BESKRIVELSE AV MASKINEN
BESKRIVNING AV MASKINEN

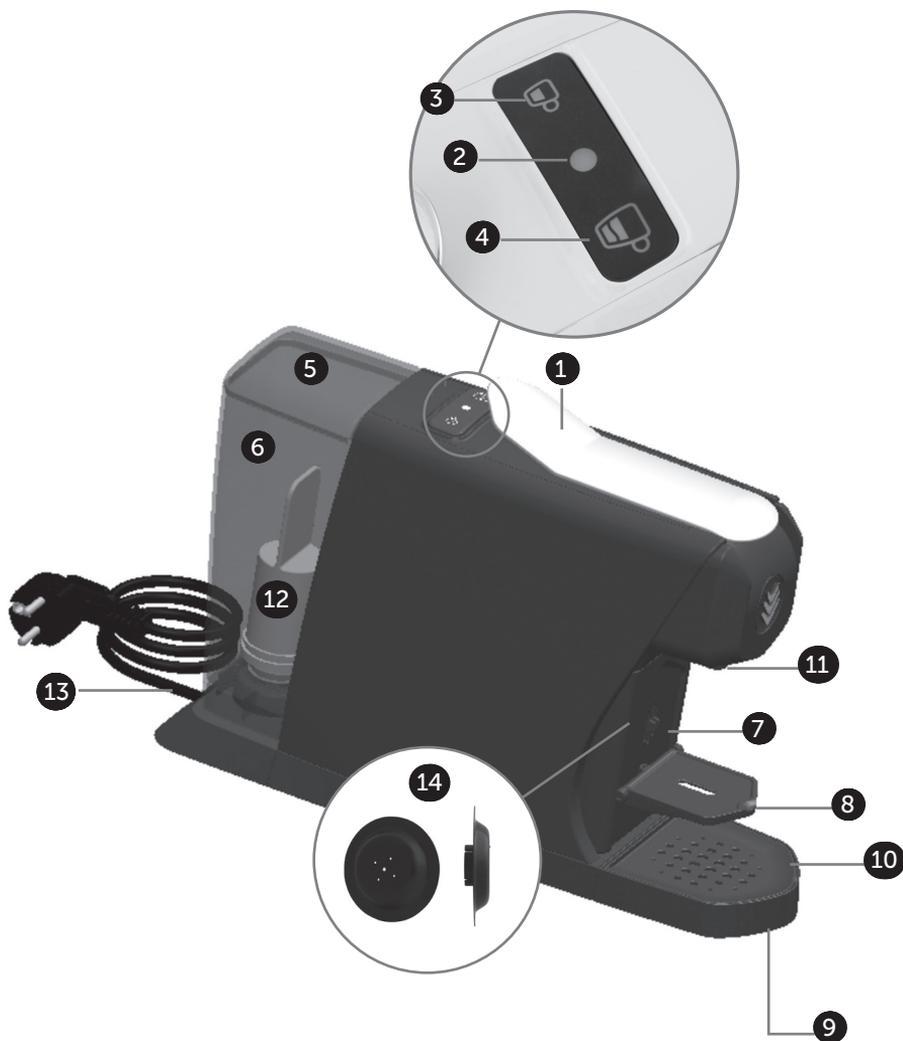

SYSTEM
1,2,3 SPRESSO